

ELECTRIC FIRE BOOSTER SYSTEM OPERATING INSTRUCTIONS



Inspections

- 1- Check the pump for leaks.
- 2- Check the connections and fittings.
- 3- Check the voltage via the control panel.
4. Ensure that the casing relief line is returning water to the storage tank.



Manuel çalıştırma

- 1- Switch the "Auto-Manual" selector to manual mode, then press the green button on the panel to manually start the pumps. (An alarm siren will sound in manual mode.)
- 2- Verify the pump's rotation direction. Check and record the motor currents from the panel.
- 3- Stop the pump by pressing the red stop button on the panel.



Automatic Operation

- 1- Switch the selector on the panel to automatic mode for automatic operation.
- 2- Reduce the system pressure via the bypass line or system to pump activation. Repeat this process for each pump.
- 3- After the pump starts automatically, wait approximately 20-30 seconds, then close the bypass valve or discharge valve and observe that the pump stops automatically. Verify that the pump has stopped after 10 minutes.
- 4- After completing these steps, leave the system in automatic mode.
- 5- When pumps are automatically activated, they cannot be stopped via the stop button before the pressure is restored. To stop, first switch to manual mode and then press the stop button.

MAINTENANCE BY AUTHORIZED SERVICE IS MANDATORY EVERY 6 MONTHS.